


How to Operate the Fire Alarm Control Panel BX-10

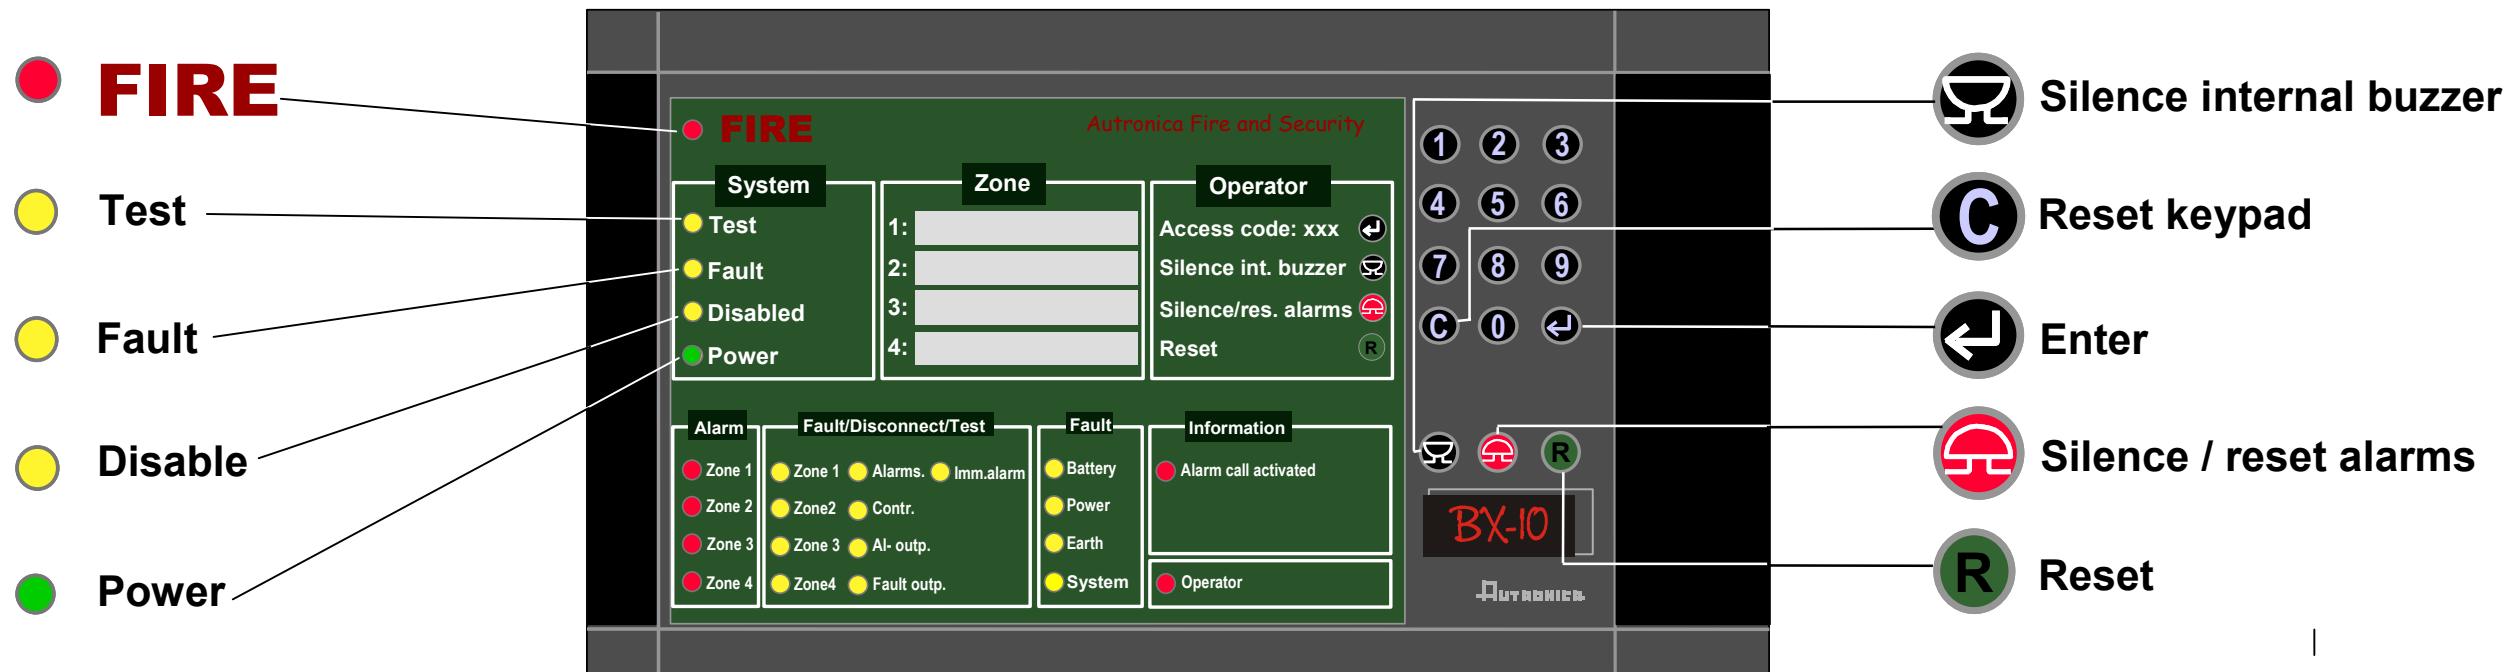

In the Event of a Fire Alarm

| Step | Actions to be taken |
|------|---|
| 1 | Follow all precautions described in the local fire instructions, step by step. |
| 2 | To cancel the internal buzzer, press |
| 3 | Investigate the site of the fire and take the necessary action. |
| 4 | Go into operator mode: key in operator code (3 numbers) + |
| 5 | To silence the alarm, press (to reactivate the alarm; press the button once again) |
| 6 | To reset the system, press |

In the Event of a Fire Warning*

| Step | Actions to be taken |
|------|---|
| 1 | Follow all precautions described in the local fire instructions, step by step. |
| 2 | To silence the internal buzzer, press |
| 3 | Investigate the fire. |
| 4 | The next step in the procedure will depend on whether or not there really is a fire. Step 4a should be followed if there <i>isn't</i> a fire, step 4b if there <i>is</i> a fire. |
| 4a | If there is <i>not</i> a fire: Go into operator mode: Key in operator code (3 numbers) + |
| 5a | To reset the system, press |
| 4b | If there really <i>is</i> a real fire, implement the necessary measures. Activate the fire alarm and alert the fire department by activating the nearest manual call-point. |
| 5b | Go into operator mode: Key in operator code (3 numbers) + |
| 6b | To silence the alarm, press |
| 7b | To reset the system, press |

In the Event of Faults

| Step | Actions to be taken |
|------|--|
| 1 | Check the error indicators on the panel and determine which fault is reported. |
| 2 | To silence the internal buzzer, press |
| 3 | Call the system administrator or engineer and implement all necessary repair work. |
| 4 | Go into operator mode: key in operator code (3 numbers) + |
| 5 | To reset the system, press |

* Both the yellow "DISABLING" indicator and the yellow LED indicator for "IMMEDIATE WARNING DISABLED" comes on.

Contact your local Autronica Service Team when service is required.
Autronica Fire and Security AS, 7483 Trondheim, Norway.
Phone: +47 73 58 25 00, fax: +47 73 58 25 01.
Visit Autronica Fire and Security's Web site: www.autronicafire.com



Betjening av brannalarmsentralen BX-10



I tilfelle brannalarm

| Trinn | Nødvendige tiltak |
|-------|---|
| 1 | Følg den lokale branninstruksens punkt for punkt. |
| 2 | Avstilling internsummeren ved å trykke |
| 3 | Undersøk brannstedet og foreta de nødvendige aksjonene. |
| 4 | Gå inn i operatørmodus ved å angi Operatørkode (3 siffer) + |
| 5 | Avstilling alarmen ved å trykke |
| 6 | Tilbakestill anlegget ved å trykke |

I tilfelle forsinket alarmvarsling*

| Trinn | Nødvendige tiltak |
|-------|---|
| 1 | Følg den lokale branninstruksens punkt for punkt. |
| 2 | Avstilling internsummeren ved å trykke |
| 3 | Undersøk brannstedet. |
| 4 | Videre prosedyre vil være avhengig av om det virkelig er et branntilløp eller ikke. Følg 4a dersom det <u>ikke</u> er et branntilløp - eller, følg 4b dersom det <u>er</u> et branntilløp. |
| 4a | Dersom det <u>ikke</u> er et branntilløp; gå inn i operatørmodus ved å angi operatørkode (3 siffer) + |
| 5a | Tilbakestill anlegget ved å trykke |
| 4b | Dersom det <u>er</u> et branntilløp; foreta de nødvendige aksjonene. Aktiver brannalarmen og varsle brannvesenet ved å betjene den nærmeste manuelle melder. |
| 5b | Gå inn i operatørmodus ved å angi operatørkode (3 siffer) + |
| 6b | Avstilling alarmen ved å trykke |
| 7b | Tilbakestill anlegget ved å trykke |

I tilfelle feil

| Trinn | Nødvendige tiltak |
|-------|--|
| 1 | Observer feil-indikatorene på panelet, og fastslå hvilken feil som meldes. |
| 2 | Avstilling internummeren ved å trykke |
| 3 | Tilkall systemansvarlig eller annen teknisk personell og foreta de nødvendige utbedringer. |
| 4 | Gå inn i operatørmodus ved å angi operatørkode (3 siffer) + |
| 5 | Tilbakestill anlegget ved å trykke |

* Indikeres ved lys i lamper for utkobling og øyebl. al. (øyeblikkelig alarm).

Kontakt ditt lokale Autronica Service Team når det er nødvendig med service.
Autronica Fire and Security AS, 7483 Trondheim, Norge.
Telefon: 73 58 25 00, telefaks: 73 58 25 01
www.autronicafire.com

