


# Brannalarmsentral BS-100 DYFI

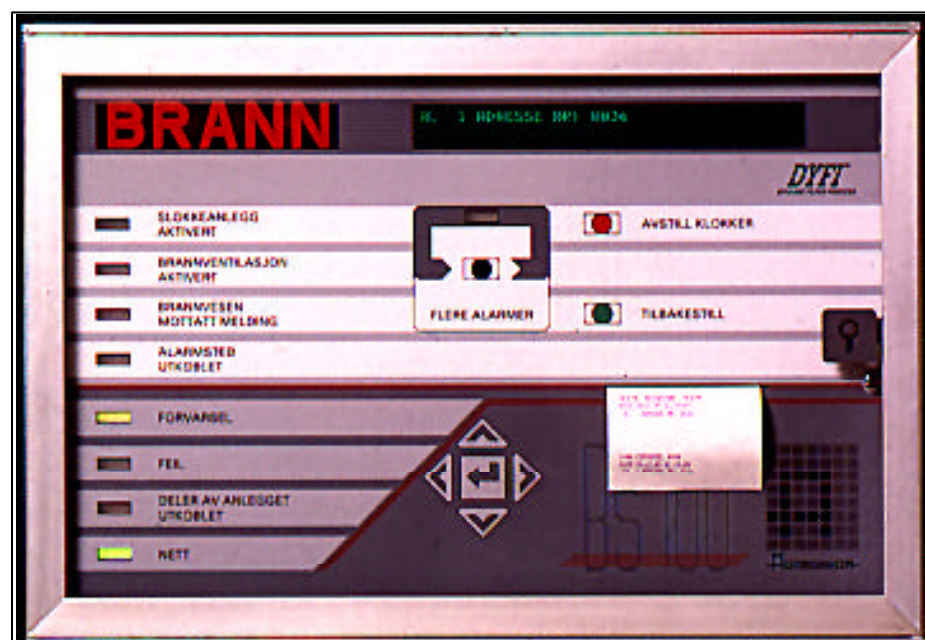

## Betjeningsknapper:

**AVSTILL KLOKKER:** Stopper alarmorganer ved første gangs betjening.  
**FLERE ALARMER:** Viser neste alarmsted (sone/adresse) ved flere alarmer.  
**TILBAKESTILL:** Setter sentralen i normaltilstand.

## Indikatorer:

**Tekstdisplay:** Viser alarmsted (sone/adresse) og eventuelle feil-tilstander.  
**BRANN:** Røde lamper, lyser ved brannalarm.  
**FLERE ALARMER:** Røde lamper, lyser ved flere alarmer.  
**ALARMSTED UTKOBLET:** Gul lampe, lyser når alarmsted (adresse) automatisk utkobles pga. fortsatt alarmnivå på tilbakestillt adresse.  
**DELER AV ANLEGGET UTKOBLET:** Gul lampe, lyser når deler av anlegget er utkoblet.  
**FEIL:** Gul lampe, lyser ved feil på anlegget.  
**NETT:** Grønn lampe, lyser når nettspenning eller 24V drifts-spennning er tilkoblet.

Slokkeanlegg aktivert (rød lampe), brannventilasjon aktivert (gul lampe) og brannvesen mottatt melding (gul lampe) er normalt ikke tilkoblet.

**Normaltilstand:** Kun grønn NETT-lampe skal lyse.

## Betjening:

### Ved brannalarm / forvarsel:

1. Følg intern "**Branninstruks**".
2. **Tekstdisplay** viser alarmsted.
3. Trykk **AVSTILL KLOKKER** når situasjonen er under kontroll.
4. Trykk **TILBAKESTILL** når brannstedet er utbedret.

### Ved feil:

1. Tekstdisplayet viser hvilken feil som har oppstått.
2. Trykk **AVSTILL KLOKKER**.
3. Sørg for at feilen blir utbedret.
4. Trykk **TILBAKESTILL** når feilen er utbedret.

Se betjeningshåndbok BS-100 for bruk av tastatur.

Ved behov for service,  
kontakt Autronica Service Team:

**Autronica Fire and Security AS, 7483 Trondheim**  
Trondheim: 73 58 25 00, Oslo: 23 28 70 00, Tønsberg 33 38 19 30,  
Moelv: 62 34 10 00, Stavanger: 51 84 09 00, Kristiansand: 38 01 34 60,  
Bergen: 55 27 35 50, Harstad: 77 00 25 50.



# Fire alarm control panel BS-100 *DYFI*

## Operation



### In the event of fire/prewarning:

1. Respond to your local "Fire alarm instruction".
2. **The text display and the zone indicator** indicates the exact location of the alarm / prewarning.
3. Press **SOUNDER SILENCE** when the situation is under control.
4. Press **RESET** when the situation is normal.

### Operating buttons:

- SOUNDER SILENCE:** Stops all alarm devices.  
**MORE ALARMS:** Scrolls all alarms (zone/address) in bottom line display.  
**RESET:** Resets all alarms, prewarnings and faults.

### Indicators:

- Text display:** Indicates the exact location (zone/address) of the alarms, prewarnings and faults
- FIRE:** Red lamp, illuminates at fire alarm.  
**MORE ALARMS:** Red lamp, illuminates when more alarms are present.  
**ZONE(S) STILL IN ALARM COND.:** Yellow lamp, illuminates when an address is automatically disabled after system reset.  
**FUNCTION DISABLED:** Yellow lamp, illuminates when parts of the system are disabled.  
**FAULT:** Yellow lamp, illuminates for any fault. Pulsating light.  
**MAINS:** Green lamp, illuminates in normal condition.

**Normal condition:** MAINS light is illuminated.

### In the event of fault:

1. **The text display** indicates the nature of the fault.
2. Press **SOUNDER SILENCE**.
3. Make sure that the fault is corrected.
4. Press **RESET** after the fault has been corrected.

For using the arrow keys, follow the instructions in "Operators Handbook"-BS-100.

**Service needed,**  
**call :**

